



ZDAPV3



Volvo S80/V70/XC70

- S80 (2006 – 2011)
- V70/XC70 (2007 – 2011)
- Basic Sound System
- Before installing check under the passenger seat if there is an OEM amplifier. If there is none, continue installing. Otherwise you have one of the larger sound systems and you need CT10VL08 instead of CT10VL07.
- The ZDA4.6 DSP is going to be installed under the passenger seat where the OEM amplifier otherwise is located.



Stereo Removal 1

- Use a plastic pry tool on the outer edge of the panel to pop it out.



Stereo Removal 2


Tools required

- T20
- Loose the two screws marked with red circles with a T20 screwdriver.



Stereo Removal 3

- Use a plastic tool to remove the plastic panel around the gear lever.

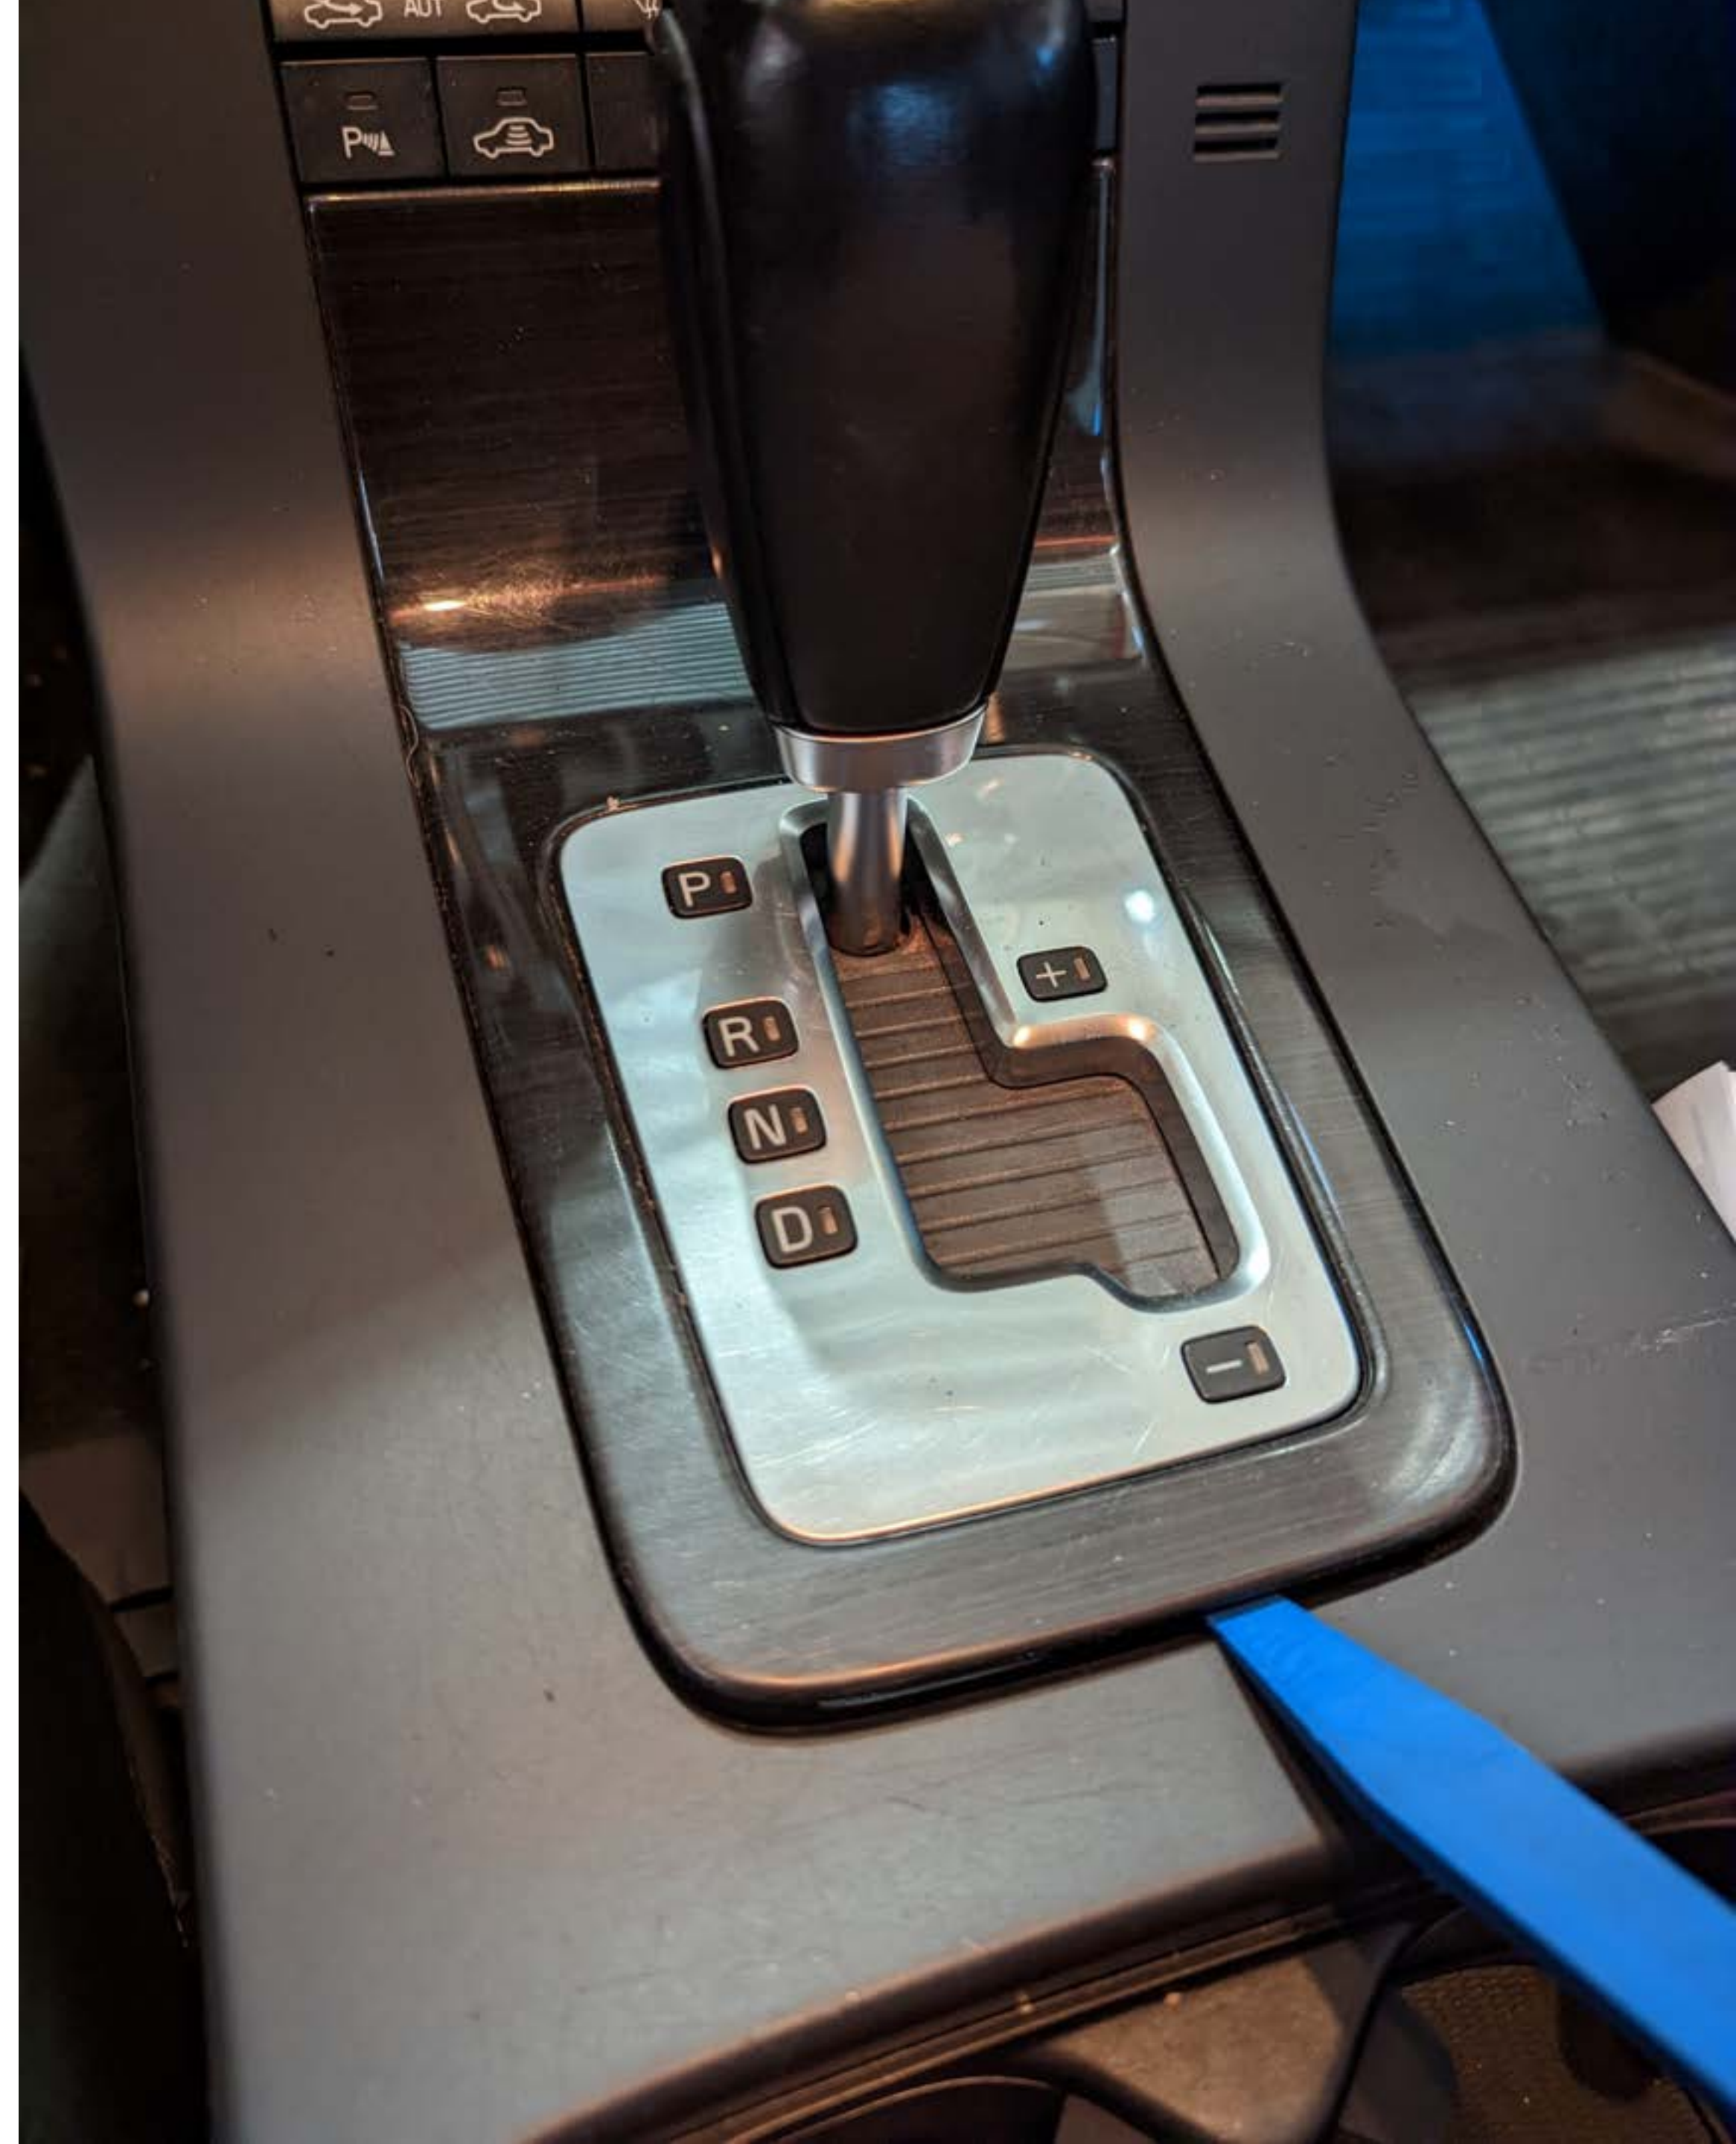

Stereo Removal 4

- Pull up the panel and put it to the side.




Stereo Removal 5

Tools required

- T20

- Loosen the four screws using a T20 screwdriver.

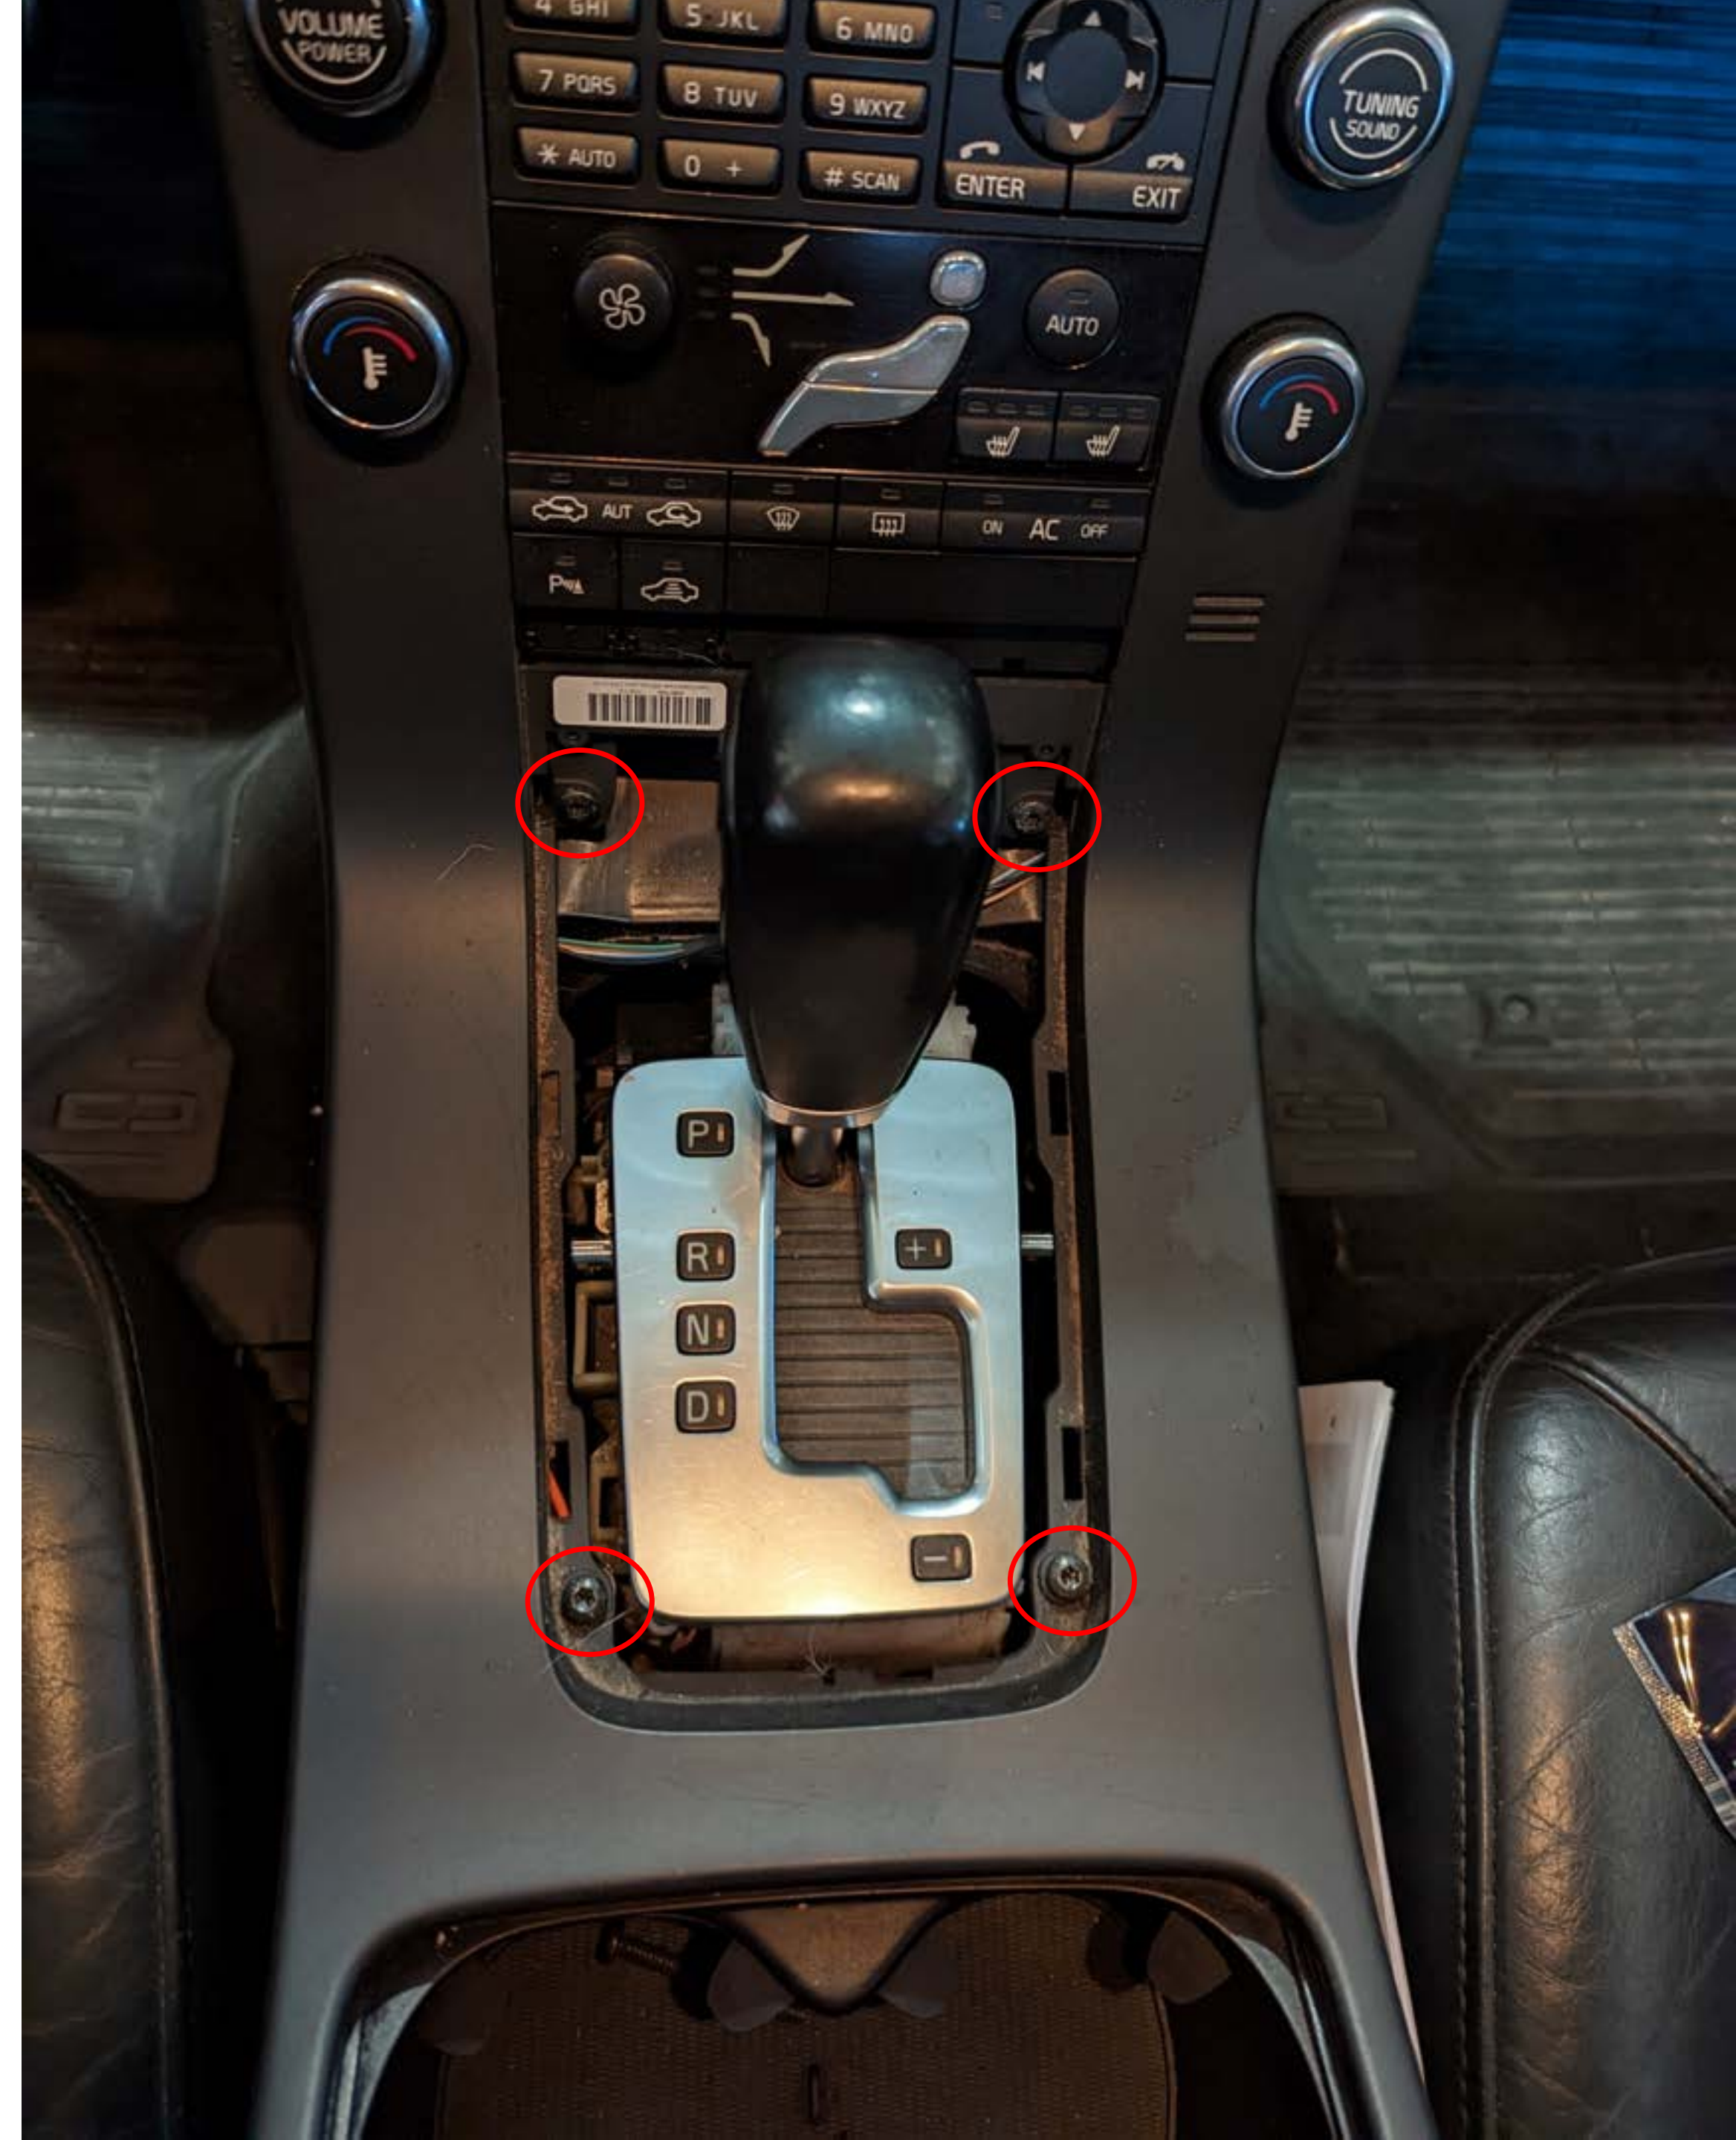

Stereo Removal 6

Tools required

- T20
- Open the center console, remove the plastic parts marked with red circles.
- Then loosen the two screws hidden under using a T20 screwdriver.



Stereo Removal 7

- Pull out the plastic screw fasteners from under the center console.



Stereo Removal 8

- The panel is now loose. Pull up the entire panel.



Stereo Removal 9

Tools required

- T20

- Loosen the two screws on each side of the stereo using a T20 screwdriver.




Stereo Removal 10

- Pull the stereo out and loosen all of the connectors on the back of the stereo.



Cable Installation 1

- Connect the CT10VL07 to the OEM cable harness.

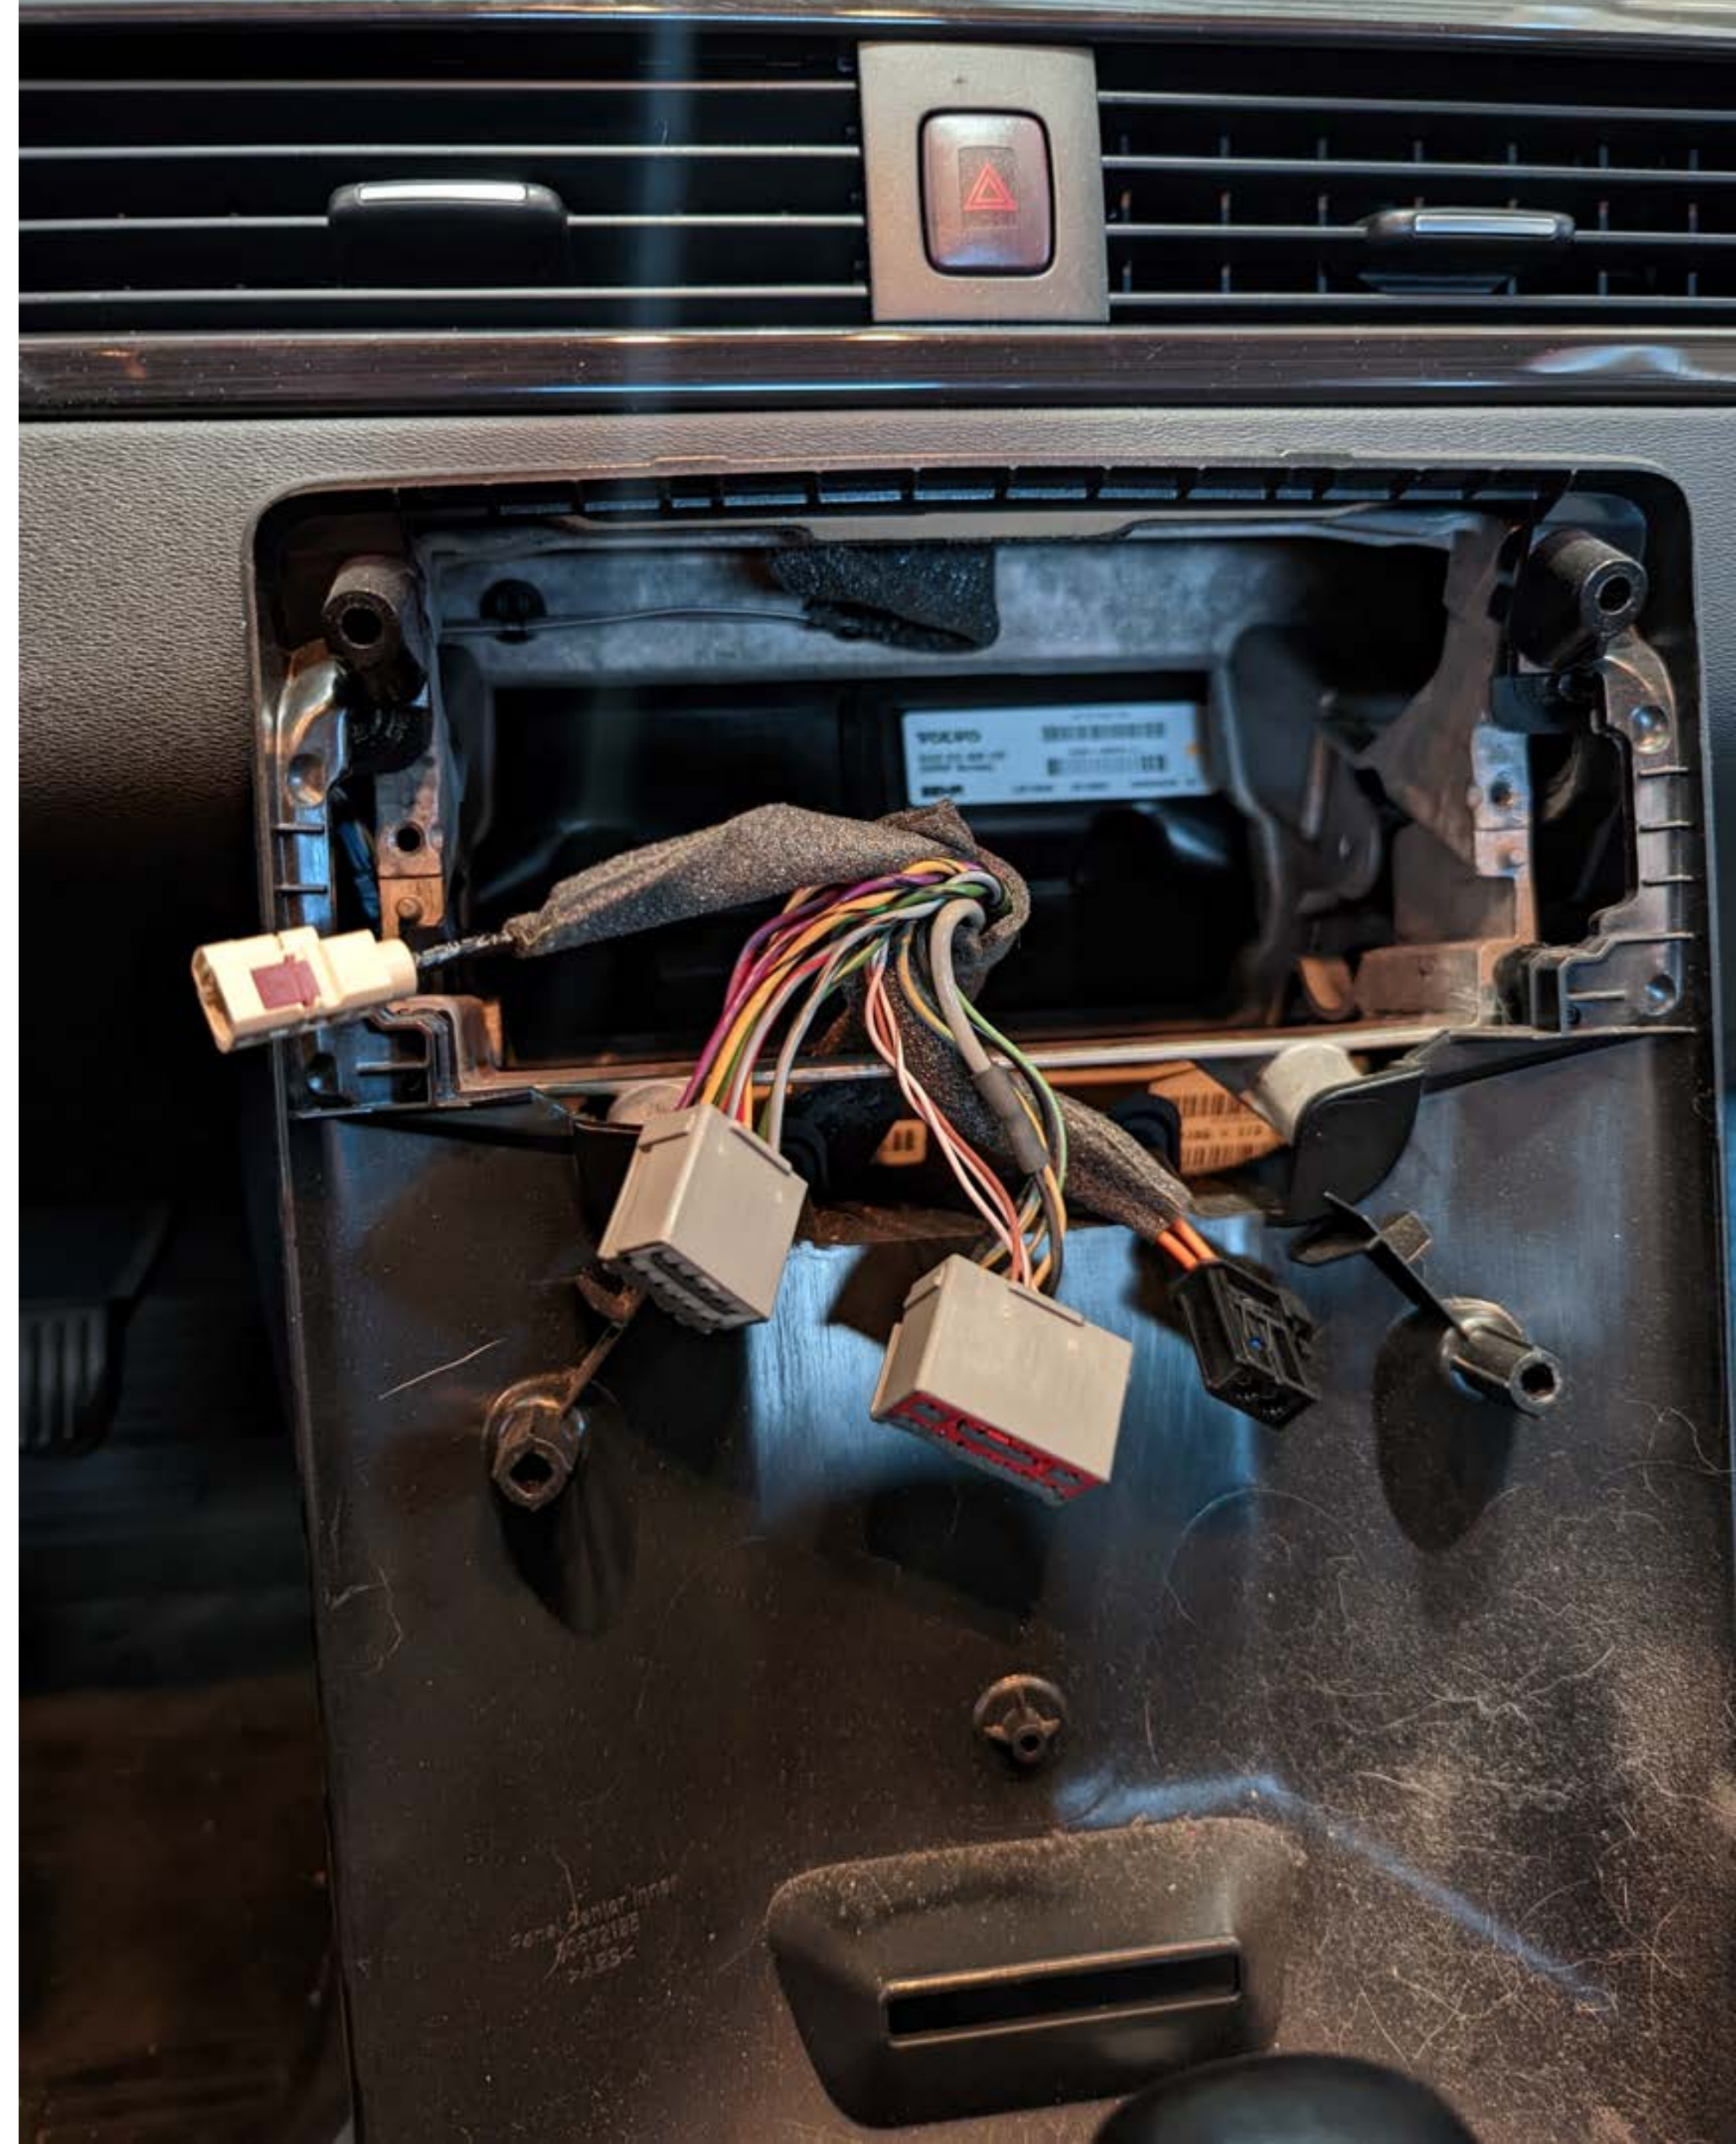

Cable Installation 2

- Connect the ZDAISOT to the CT10VL07 and pull the cable out to the passenger side.

