

ZDSW7CS



2x Tweeters



2x Woofers

Installation Tools Required

Vehicle used for installation:*




Volkswagen Passat 2020 (B8) (Facelift)
Standard Stereo

**Some differences may occur between different car and year models.*

T30 Screwdriver



10mm Wrench

Plastic Pry Tool

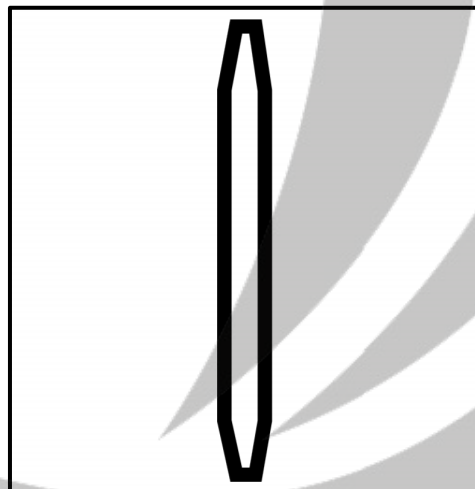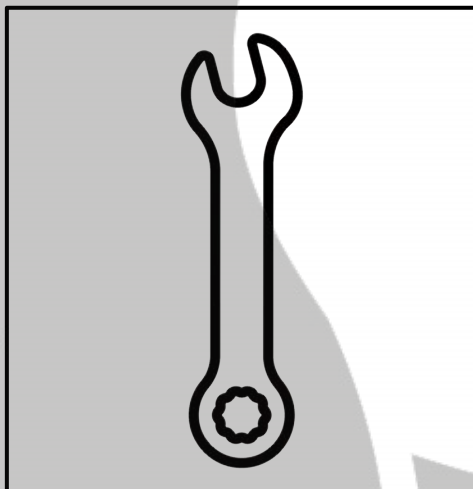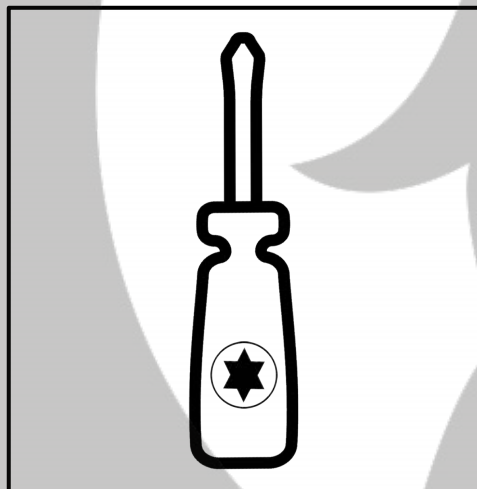

Drill

Nipper (only if step 12 is required)

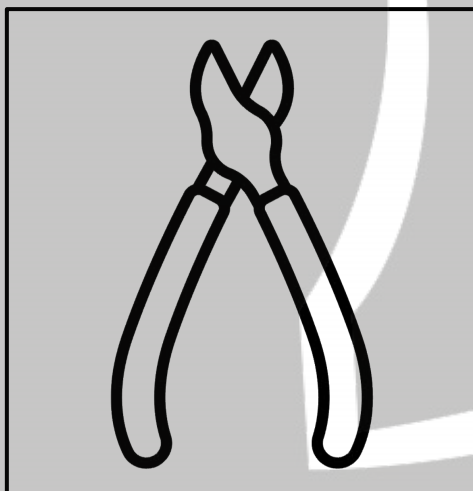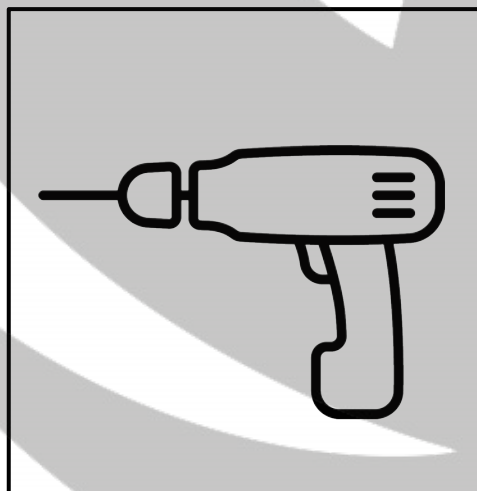

PHOENIX GOLD

ZDSW7CS Installation 1

Tools required:



1x T30 Screwdriver



1x Plastic Pry Tool



1x 10mm Wrench

1. Door panel removal



2. Turn the nut 90° degrees



3. Unscrew the screw




4. Remove the plastic cover panel and unscrew the screw



ZDSW7CS Installation 2

Tools required:

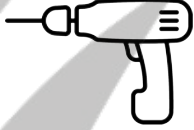


1x Drill 5mm




1x Plastic Pry Tool


5. Remove the door panel (pull)

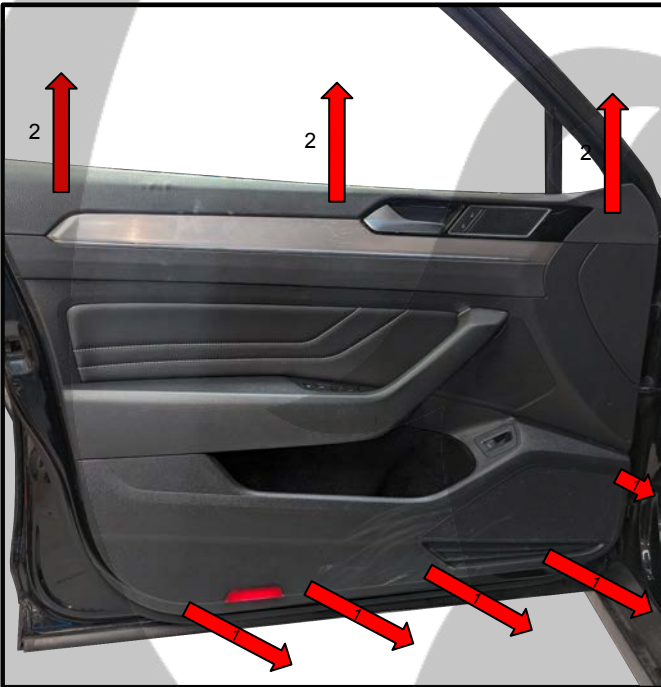

6. Drill out the OEM speaker

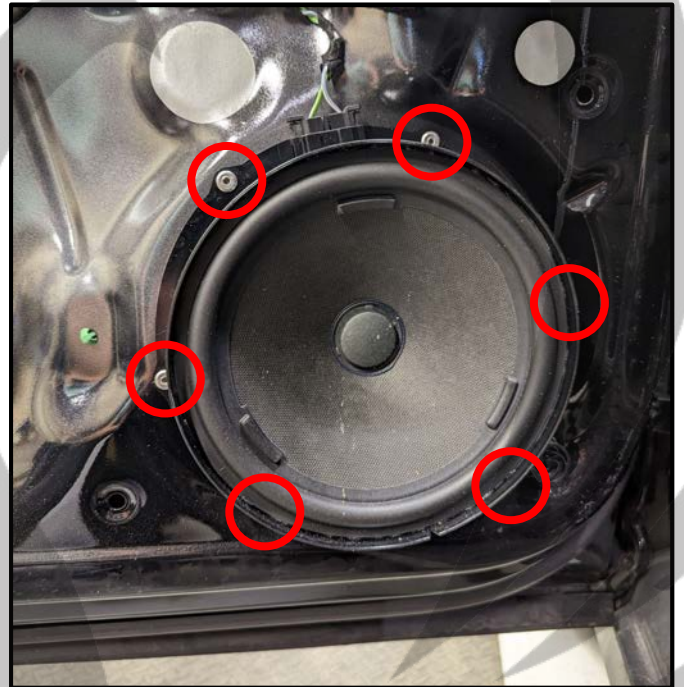

7. Disconnect the speaker connector

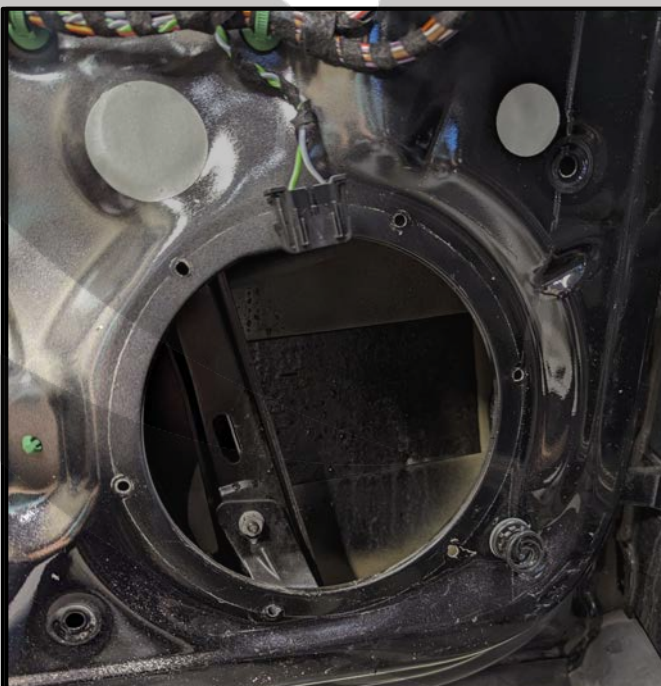

8. Install the woofer




ZDSW7CS Installation 3

Tools required:



1x Pry Tool

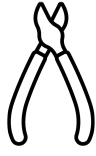

1x Nipper (only if step 12 is required)

9. Locate the OEM tweeter




10. Remove the tweeter



11. Tweeter installation




12. In some cars the tweeter grill needs to be carefully removed

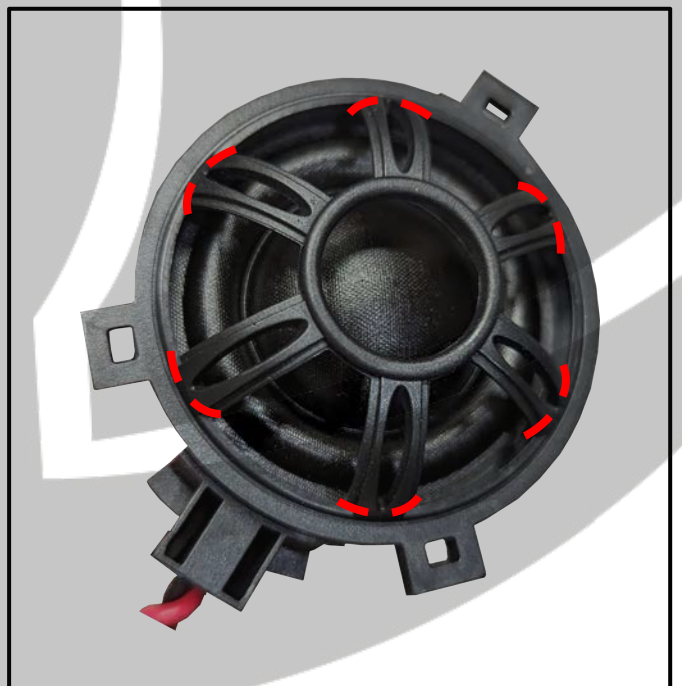

ZDSW7CS Installation 4

Tools required:

13. Tweeter grill removed

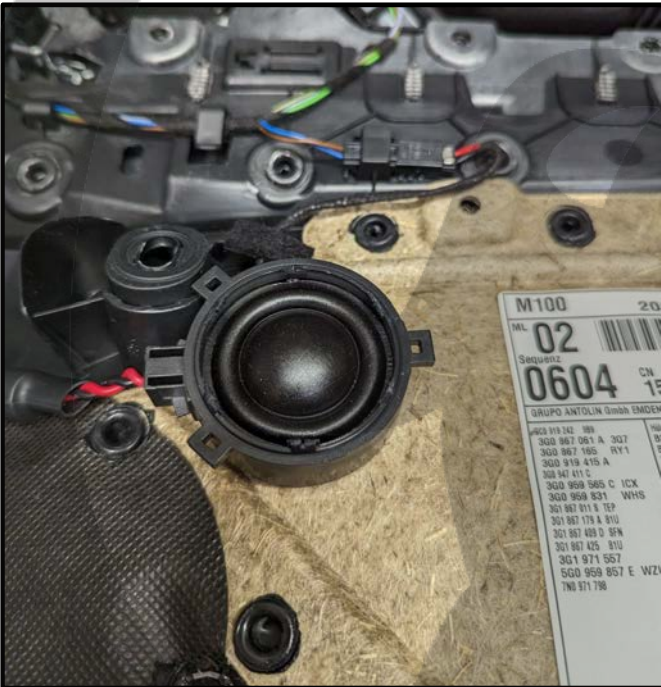

14. Install the tweeter (push in place)



15. Connect the tweeter connector



16. Reassemble the door



On Behalf of the Phoenix Gold team,
Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.



www.phoenixgold-eu.com